

## Quick Start Guide


### 1: Installing BuddyTalk Software

1. Place the BuddyTalk CD in your CD-ROM drive.
2. Double-click **My Computer**, then double-click your CD-ROM drive icon.
3. Locate **setup.exe** and double-click it.
4. BuddyTalk will begin to install itself. Follow the on-screen prompts to continue installation.

### 2: Entering Your User Information

To use BuddyTalk you **MUST** be connected to the Internet. If you have not established your Internet connection, please do so now.


1. Launch the BuddyTalk application, and a dialog box will appear prompting you to enter some user information. Fields with an asterisk(\*) require a valid entry. If this dialog box does not appear, you can access it by clicking **Options** on the BuddyTalk Dialer, then selecting **Device Configuration**.

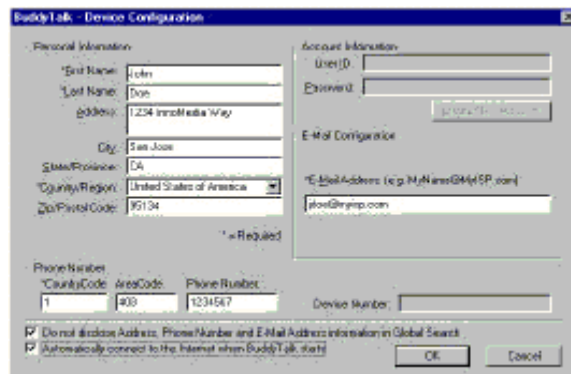

2. If you have never entered a User ID and Password in a previous installation of BuddyTalk, then the Account Information section will be initially disabled. Enter the rest of your user information, then click **OK**.

3. A dialog box will pop-up, informing you of your new BuddyTalk Device No. Keep this number handy as it is now your online “phone number”. You will need this number when you click OK to register for your free BuddyTalk account. Click **OK**.

4. You will see the BuddyTalk Account Registration page in your browser. Fill in the appropriate information and click **OK**. Your new User ID and Password will be emailed to you.

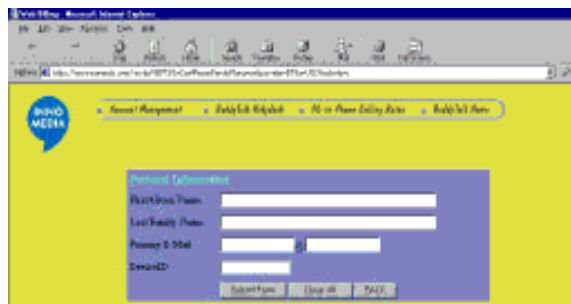


### 3: Connecting a Headset to Your Soundcard

BuddyTalk will give you the most optimum performance when used in conjunction with a PC headset which has an integrated microphone. This section will describe how to connect a headset to your PC's soundcard.

1. PC headsets have two plugs, one for microphone and one for speaker/ headphones.  
Locate these two plugs on your headset.
2. Locate your soundcard on the back of your PC.
3. Some older soundcards do not have colorcoded jacks but will have jacks labeled for speaker, mic, and auxiliary connections. If your soundcard is color-coded, then the speaker jack will be green, and the microphone jack will be red.
4. Plug the mic plug into the microphone jack on your soundcard.
5. Plug the headphones plug into the speaker jack on your soundcard.

Note: If you currently have speakers plugged in, you will have to disconnect them in order to use a headset.

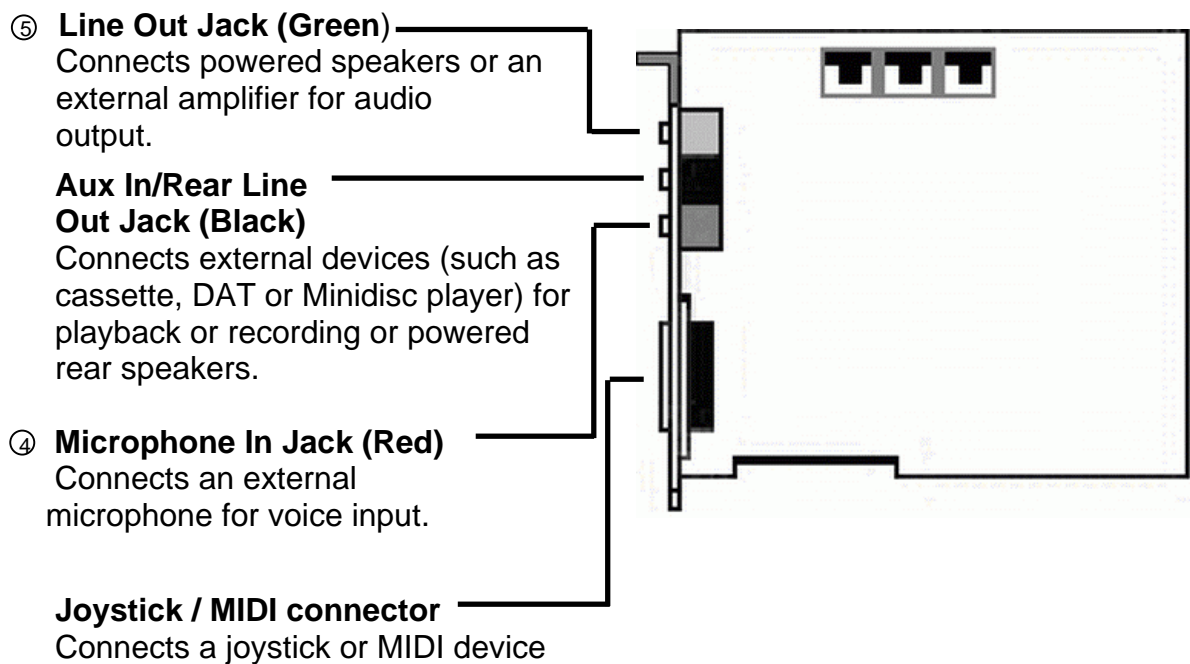

## 4: Firewall Users

If you use a Firewall/NAT router on your network, there are some additional steps you will need to take before you can begin placing calls.

1. Log into the management interface of your router. If you are unsure how to do this you may need to consult the documentation of your particular router.
2. Before you proceed, make note of the IP address of the PC which you will be running BuddyTalk on. To find this address, simply click **Start**, then **Run**, then type **command** and click **OK**. At the > prompt, type **ipconfig** and then press **enter**.
3. On your router's management interface, you will need to configure the router to use its special applications server to forward port requests to the IP address that you retrieved in step 2.
4. There are 2 ports to configure, UDP 8481 and UDP 8995. On your router, you would configure these ports to point to the IP address of your BuddyTalk PC. For example, if the IP address is 192.168.0.2, then your configuration on your router would look something like this:

<b>PORT NUMBER</b>	<b>SERVER IP ADDRESS</b>
8481	192.168.0.2
8995	192.168.0.2

5. After setting your router properly, don't forget to save the changes.
6. You can now start making calls using BuddyTalk. Remember, only the PC whose address is listed in the configuration will be able to use BuddyTalk.

## Making a PC-to-Phone Call

1. Click **PC-to-Phone** at the top of the BuddyTalk Dialer user interface.



2. Dial the number you wish to call and click the **Red Telephone Icon** in the center of the BuddyTalk Dialer interface.



Note: Numbers should be dialed in the format of country code + area code + phone number. There is no need to dial an international long-distance access code.

## Making a PC-to-PC Call

1. Click **PC-to-PC** at the top of the BuddyTalk Dialer user interface.



2. Then dial the device number of the person you wish to call and click the **Red Telephone Icon** in the center of the interface.



Note: If you are unsure of the person's Device Number, you may search the online global directory by clicking the *Search* button.



## Launching BuddyTalk after Windows has started

1. If you reboot your machine, you may launch the BuddyTalk user interface by double-clicking on the *BuddyTalk Icon* in your system tray/taskbar at the lower right hand corner of your desktop.



If you have comments or questions regarding BuddyTalk, please direct them to:  
**buddytalkinfo@innomedia.com**

# The BuddyTalk Dialer User Interface

